

Parts list

- 1. 110 / 240 V AC power adapter (for house or barn use)
- 2. Camera
- 3. 12V DC power adapter , to be used in the trailer
- 4. Metal permanent mounting bracket
- 5. 9V battery for initial setup process or emergency use
- 6. C Clamp mounting bracket / battery case
- 7. Outdoor booster antenna clipping base and cable (17 ft. long)
- 8. Antenna rod
- 9. Ethernet cable (for house or barn initial setup use, does not need in the trailer)